

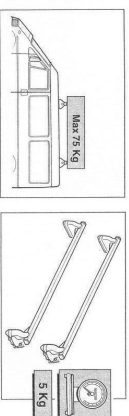


Maximum load per vehicle 75kg



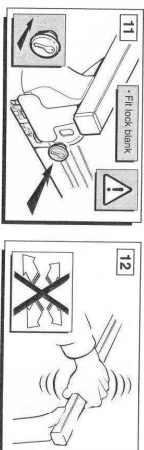


5 Kg

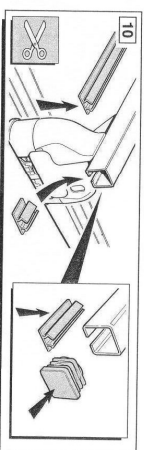

Optional Extra:

- Roof bar locks available.
- Ask a member of staff for details.

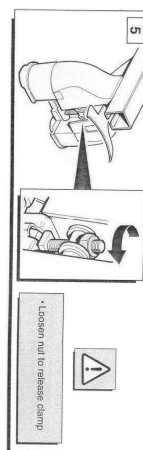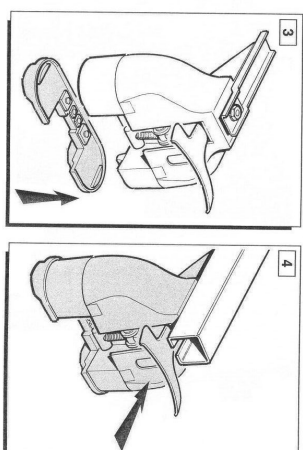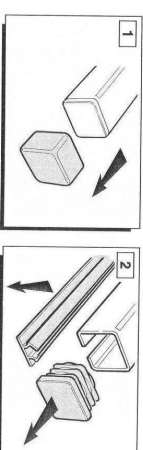




• Loosen nut to release clamp

Important

- The maximum recommended load stated on the front of this booklet must not be exceeded, and the vehicle manufacturer's directions as to maximum recommended load must be followed. The maximum load must be found in the vehicle's owners handbook.
- Maximum load = The weight of the load carrier + the weight of the load.
- It is very important to ensure that all loads are evenly distributed across the load bars and are safely secured using suitable lashing techniques, using strong webbing straps.
- Before driving and at regular intervals during the journey, check that all loads are properly clamped and that all load attachments are fully tightened in accordance with these instructions.

Special Recommendations

- Read these instructions for future reference, ensure that any other users of the commercial bar system are familiar with their contents.
- If small heavy loads are being carried, load to one side of the bar, not the middle.
- Where specialised accessories are available they should be used (e.g. Pipe Clamps, etc).
- When using the bars, especially when carrying a load, the driver must be aware of the vehicle's stability. Driving techniques should be altered to allow for this. Reduce speeds and allow longer braking distances.
- When fitted, the roof bars will effect your fuel economy, therefore please remove when not in use.

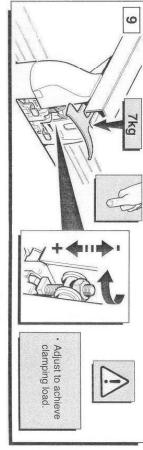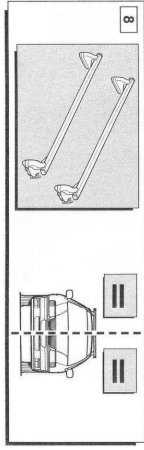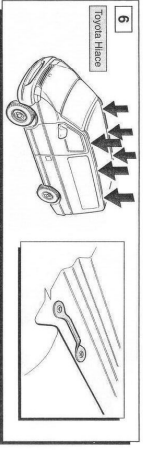

• Adjust to achieve clamping force