

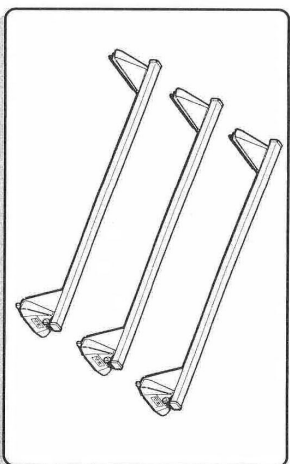
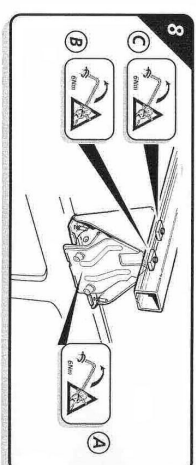
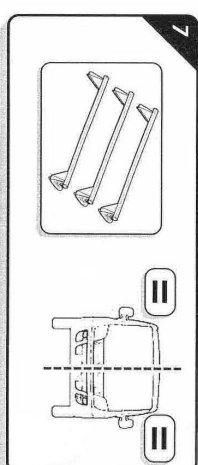
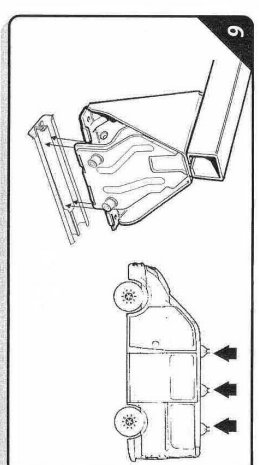
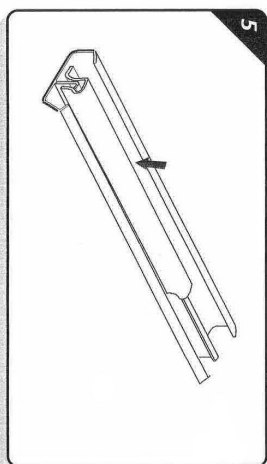
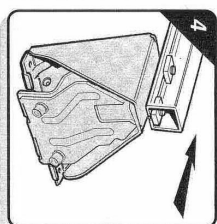
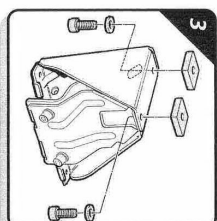
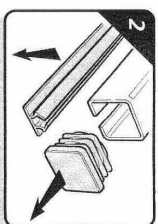
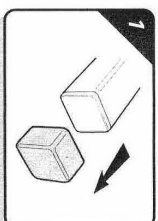


MONT BLANC®

Load Carrier Fitting Instructions CVS11

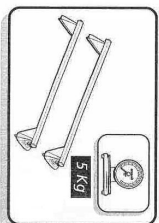

Maximum load per vehicle 75kg

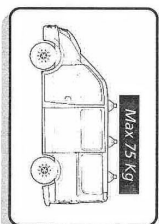

Important

- The maximum recommended load stated on the front of this booklet must not be exceeded. The vehicle manufacturer's directions as to maximum recommended load must be observed (this can be found in the vehicle's owner handbook).
- Maximum load = the weight of the load carrier + the weight of the load.
- It is very important to ensure that loads are evenly distributed across the load carrier. Loads should be secured using suitable lashing methods (e.g. strong webbing straps with buckles).
- Before driving and at regular intervals during your journey, check that all securing screws, clamping devices and foot attachments are fully tightened in accordance with these instructions.
- Neither the roof bars nor load must project beyond the maximum profile of the vehicle.
- Surf boards, timber and large flat objects may produce damaging aerodynamic forces to the vehicle and should be removed to the rear of the vehicle. We therefore recommend travelling at much reduced speed when carrying these articles. Where two or more surfboards are carried (or similar items which may produce lifting forces), they should not be stacked one upon the other. They should each be secured independently to the front and rear of the vehicle using straps or methods that are capable of withstanding the lifting forces.
- The distance between front and rear load bars should be at least 700mm (load positions stated by the vehicle manufacturer).

Special Recommendations

- Retain these instructions for future reference, ensure that any other users of the commercial bar system are familiar with their contents.
- If small heavy loads are being carried, load to one side of the bar, not the middle.
- Where specialised accessories are available, they should be used. (e.g. Pipe Clamps, etc.)
- When using the bars, especially when carrying a load, the driving characteristics of your vehicle will change. Driving techniques should be altered to allow for this. Reduce speeds and allow longer braking distances.
- Ensure these roof bars are maintained and kept in good working order.
- Take care not to drive in low places such as garages or multi-storey car parks when carrying a high load.
- Do not put the car through an automatic car wash with the load carrier mounted.
- There is some risk that the paint under the foot rubbers may not match any colour of the vehicle paintwork. To avoid this, clean the feet and the vehicle prior to fitting. The load bars should be removed at regular intervals to repeat this process.
- When fitted, the roof bars will effect your fuel economy, therefore please remove when not in use.

