


MERCEDES BENZ C-KLASSE
 MERCEDES BENZ E-KLASSE

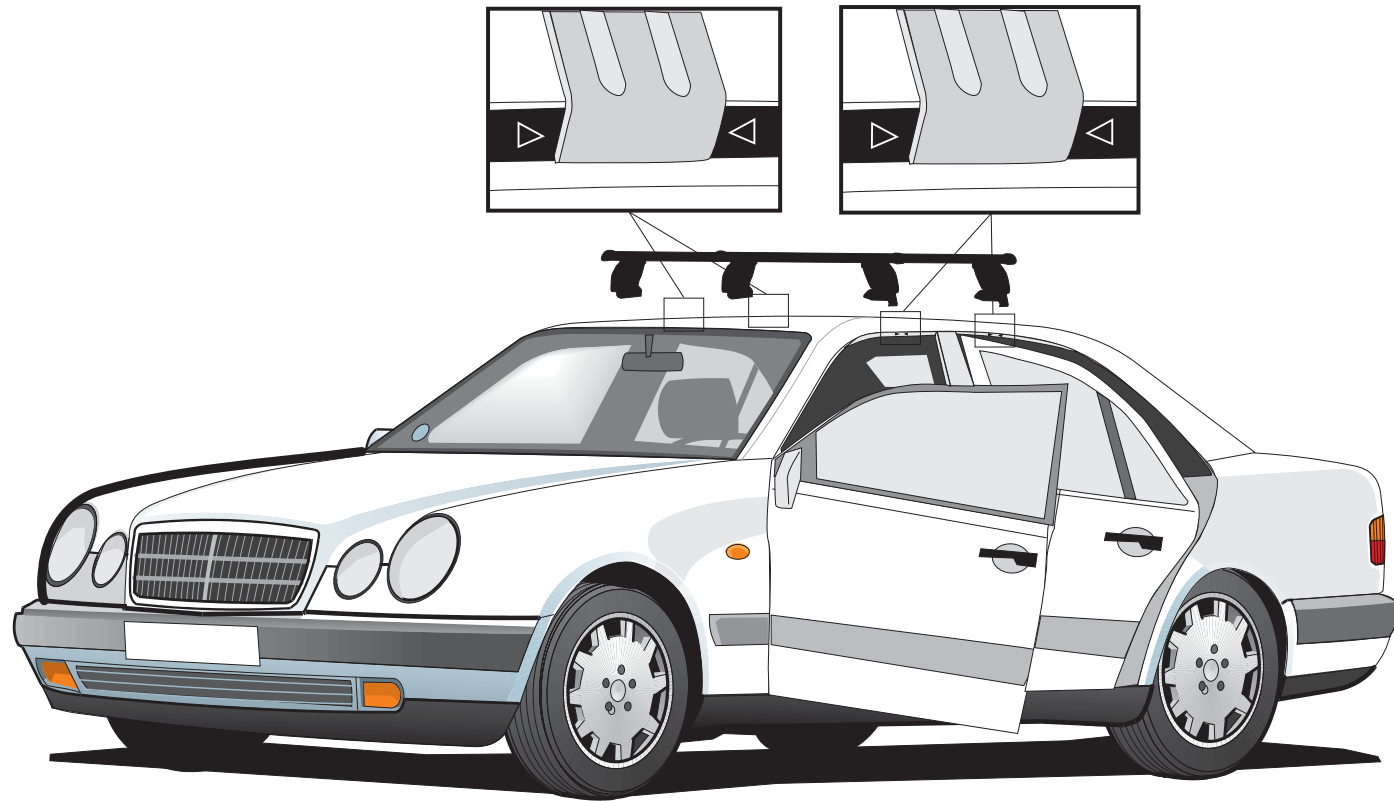


MONT BLANC®



MADE IN SWEDEN

Komplettierung Appendix Tillägg

FK 113

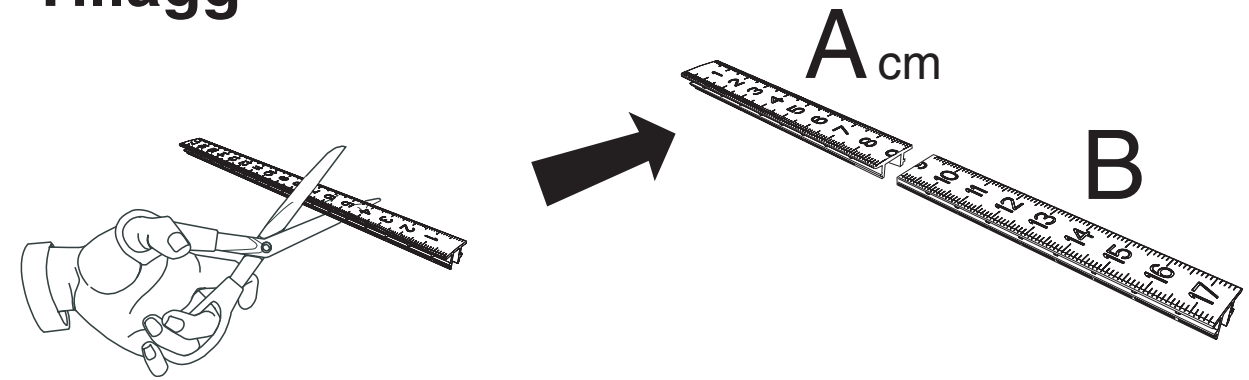

A Distance spacer / B slot cover
 A Distanz / B Schlitzschutz

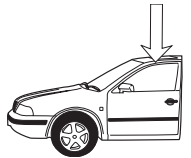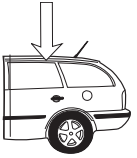Breiteneinstellung für Ihr Fahrzeug Width settings for your vehicle				 Spacer/Distanzen A Front/Vorne		 Spacer/Distanzen A Rear/Hinten	
				MERCEDES BENZ	190	4D,T	82-93
MERCEDES BENZ C-Klasse (W202)		4D,T	96-00	→ 4,5		3,3	
MERCEDES BENZ E-Klasse (W210)		4D,T	96-02	→ 5,8		5,2	
TOYOTA PRIUS		4D,T	01-	→ 5,7		5,3	

A cm


0505-150616-2

Phone. +46 33 222700
 Fax. +46 33 270882
 Email. info@montblanc.se
 Webpage. www.montblanc.se

Deutschland
 Servicehotline:02234/95 99 121

World Class Carrier Systems


Montageabstand auf Ihrem Autodach (Siehe Liste)
 Roof rack positions on the roof for your vehicle (see list)

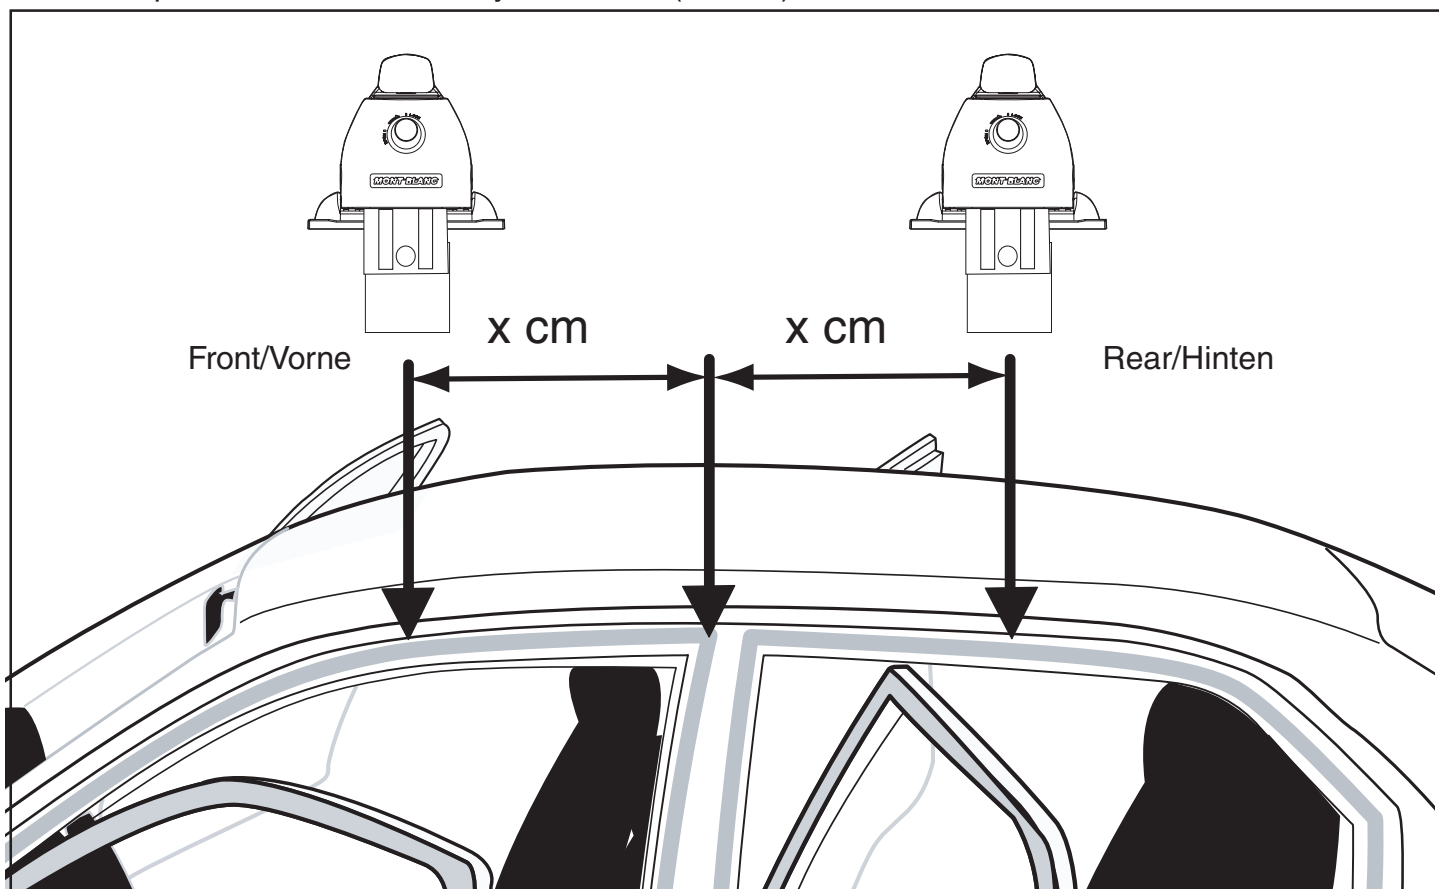

				Distance/Abstand Front/Vorne	Distance/Abstand Rear/Hinten
MERCEDES BENZ	190	4D,T	90	→ 25,0	40,0
MERCEDES BENZ C-Klasse (w202)		4D,T	96-00	→	
MERCEDES BENZ E-Klasse (w210)		4D,T	96-02	→	
TOYOTA PRIUS		4D,T	01-	→ 31,0	40,0

cm cm

Montageabstand auf Ihrem Autodach (Siehe Liste)
 Roof rack positions on the roof for your vehicle (see list)

