


# Mont Blanc®

- |                             |                              |
|-----------------------------|------------------------------|
| (D) MONTAGEANLEITUNG        | (FIN) ASENNUSOHJEET          |
| (GB) FITTING INSTRUCTIONS   | (NL) MONTAGEVOORSCHRIFT      |
| (S) MONTERINGSANVISNING     | (E) INSTRUCCIONES DE MONTAJE |
| (F) INSTRUCTIONS DE MONTAGE | (I) ISTRUZIONI DI MONTAGGIO  |

Lastenträger, Load Carrier, Lasthållare, Porte-Tout,  
Taakkateline, Allesdrager, Porta-equipajes, Portapacchi  
Citroën C5 4D,T 08-, Citroën C6 05-, Peugeot 207  
3,5 D,T 02/06-, Peugeot 407 4D,T 05/04-,  
Peugeot 308 3,5DT 09/07-,  
Peugeot 3008 5D 2009, Peugeot 5008 2010-

**866**

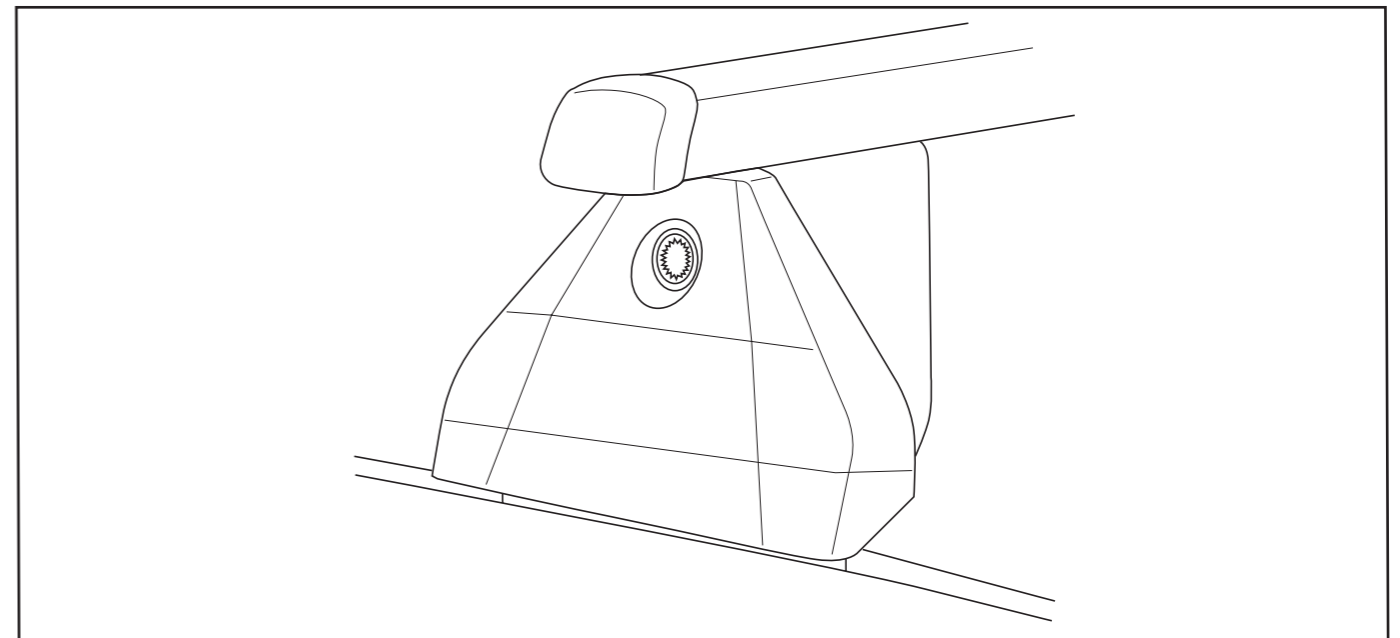

**DIN 75302/03.91**

1006 151295-5

  
[www.montblancgroup.com](http://www.montblancgroup.com)

