




6

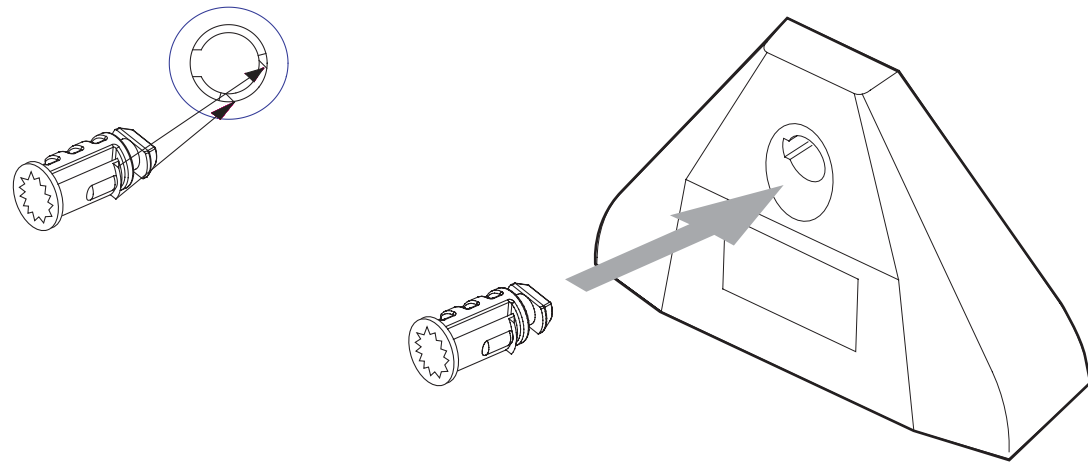


7

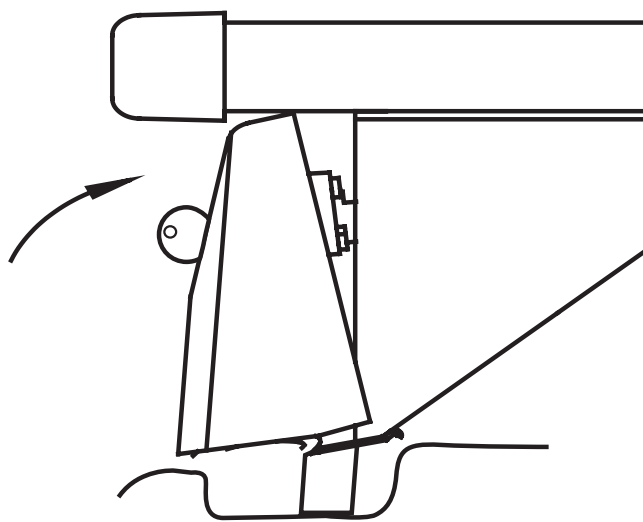

8

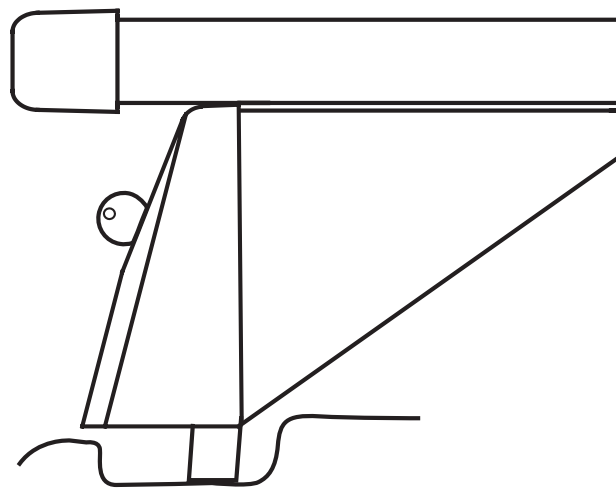

9

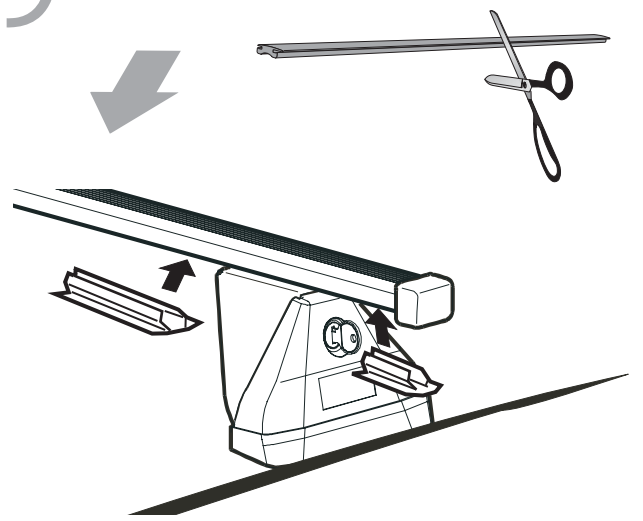


Mont Blanc®

- (D) MONTAGEANLEITUNG
- (GB) FITTING INSTRUCTIONS
- (S) MONTERINGSANVISNING
- (F) INSTRUCTIONS DE MONTAGE
- (FIN) ASENNUSOHJEET
- (NL) MONTAGEVOORSCHRIFT
- (E) INSTRUCCIONES DE MONTAJE

CITROËN JUMPY II 07-, FIAT SCUDO II 07-, PEUGEOT EXPERT II 07-, OPEL VIVARO 01-, NISSAN PRIMASTAR 02-, RENAULT TRAFFIC II 01-


**Lastenträger, Load Carrier, Lasthållare, Porte-Tout,
Taakkateline, Allesdrager, Porta-equipajes
869**

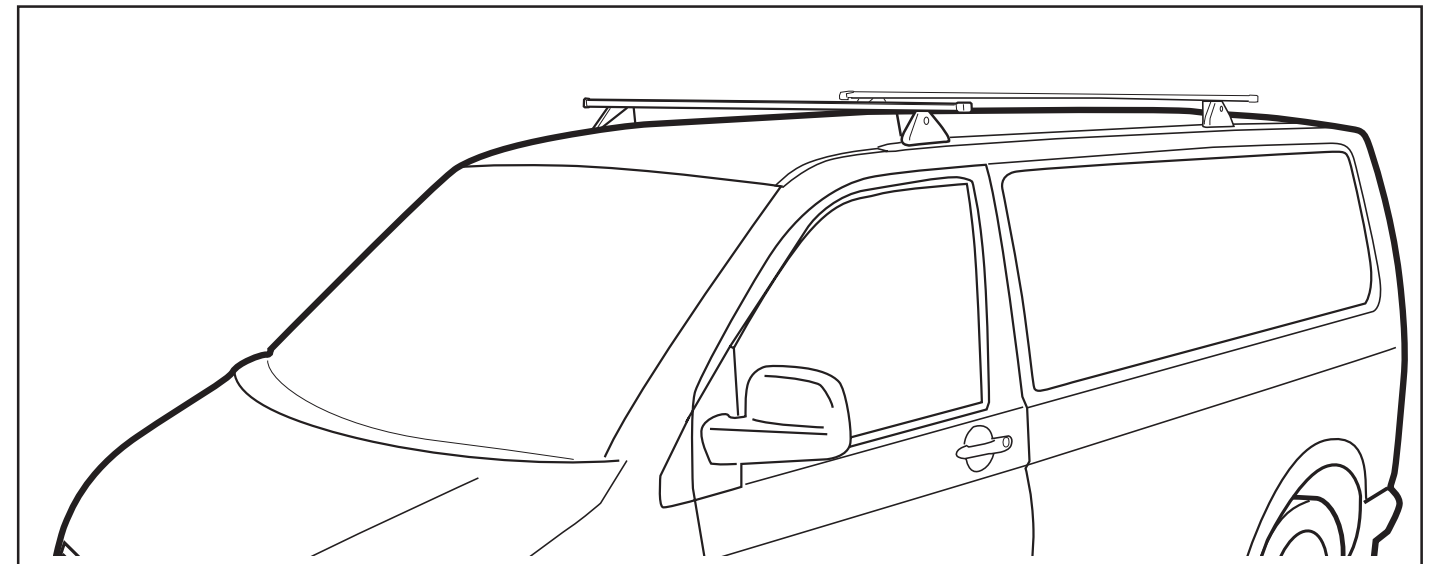

DIN 75302/03.91

1606 151296-2

5 JAHRE GARANTIE
YEARS GUARANTEE
www.montblancgroup.com

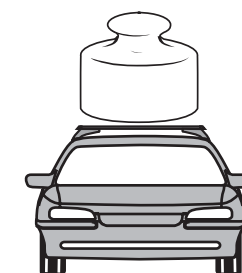

- x1 Max 50 kg
- x2 Max 100 kg
- x3 Max 150 kg
- x4 Max 200 kg

